



23	back screw GLA-RP	Vis arrière GLA-RP	X	X								
24	back screw GLA-Spro	Vis arrière GLA-Spro			X	X						
25	Cut&hold system	Support cut&hold	X									
26	Screw for cut&hold system	Vis pour support	X									
27	Guide bush	Douille			X	X						
28	Screw for anvil	Vis ctre-lame			X	X						
29	Handle for blade (S-Pro)	Porte lame GLA-Spro			X							
30	Handle for anvil (S-Pro)	Long-bec GLA S-Pro			X							
31	Anvil GLA-Spro	Contre-lame GLA-Spro			X							
32	Rotative handle	Poignée rotative				X						
33	Aluminum handle + axe	Porte-lame alu+axe Roto				X						
46	Spring GLA-D	Ressort GLA-D										
48	Nut GLA-D	Ecrou GLA-D										
201	Handle for blade	Porte lame					X					
202	Handle for anvil	Long-bec					X					
203	Blade Polish	Lame Polie					X		X			
203A	Blade PTFE	Lame PTFE					X		X			
204	Anvil	Contre-lame					X					
205a	Catch plate	Plaque de base					X	X	X			
205b	Nut lock	Plaque d'arrêt					X	X	X			
206	Thumb catch	Cliquet					X					
207	Bolt	Boulon central					X					
209	Bush	Douille					X	X	X			
210	Pin	Goupille					X	X	X			
211	Rivet	Rivet					X	X	X			
212	Screw for thumb catch	Vis					X	X	X			
213	Spring	Ressort					X	X	X			
214	Cushion	Butée					X	X	X			
215	Shock absorber	Amortisseur					X	X	X			



4008	Nut										X		
4012	Screw for nut lock										X		
4014	Shock absorber										X		
4028	Screw for handle										X		
4033	Nut for handle										X		
SAV-1			X	X									
SAV-2					X	X							
SAV-3							X						
SAV-4								X					
SAV-5									X				
SAV-151	1507+1508											X	
SAV-401	4007+4008+4005+4012										X		
SAV-402	2x 4028+ 2x 4033										X		

Lame/Blade 203 idem à Felco 2-4-11

Lame/Blade 603 idem à Felco 6-12